PISCO

Antispatter Tube Cover Peeler



Cover Stripping Cutter for Antispatter Tubing




Peeling only the flame retardant cover like sharpening a pencil appropriate for the tube inserting length of Pisco's anti-spatter products.

■ Anti-spatter products

Push-in fitting		Speed controller		Flow controller
Tube Fitting Spatter	Tube Fitting Brass	Speed Controller Spatter	Speed Controller Brass	Throttle (Needle) Valve Brass

- No damage to the inner tube.
- The translucent body case enables to check cutting progress easily.

Model Designation (Example)

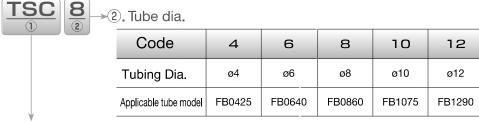


①. Antispatter Tube Cover Peeler


Detailed Safety Instruction

- 1. A blade is equipped inside. Please stop using this product immediately when a crack, a fracture, or a chipping is found on the resin part to prevent an injury.
- 2. Do not dismantle or remodel the product in ways which affect the basic structure, performance or function of the product. It may damage the product itself and cause an injury.
- 3. Avoid putting load on the product such as pulling, twisting, or bending. It may damage the product itself and cause an injury.

- 1. The peeler is designated for PISCO Antispatter Tube (flame-retardant tube). Do not use it for other purposes except for peeling the cover of Antispatter Tube.
- 2. When using for an excessively bent or crushed tube, the product may not be able to deliver its performance.
- 3. If the peeler is used with the cover discharging spout blocked, the stripped cover piece may get clogged inside the peeler.


Outline Dimensional Drawing

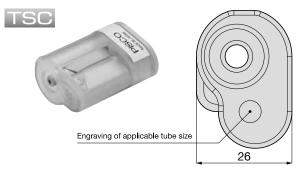

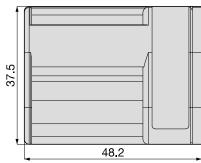

	Unit ∶ mm	
Model	Weight	
	(g)	
TSC4	20	
TSC6	20	
TSC8	21	
TSC10	21	
TSC12	21	

How to use the Cutter

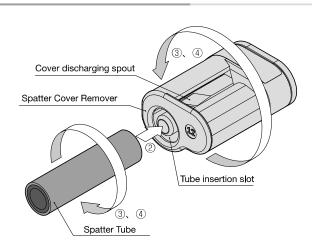

- ①When cutting an antispatter tube, make sure to form the cut surface of the tube orthogonally.
- ②Inert an antispatter tube to the tube insertion slot until it touches the blade.
- ③Insert the antispatter tube further with rotating the tube or the Antispatter Tube Cover Peeler clockwise until the tubing edge reaches the end in the peeler.
- (4) Keep rotating an antispatter tube or the cover peeler until the cover gets stripped completely, and then take out the tube from the Antispatter Tube Cover Peeler.
 - > Rotate either the tube or the cover peeler which is easier to rotate.